

KOM-RH Rack Chassis

User manual

Issued date: 2023, Sep

Version: V1.1

KYLAND

KOM-RH Rack Chassis

User Manual

Disclaimer: Kyland Technology Co., Ltd. tries to keep the content of this manual as accurate and as updated as possible. This document is not guaranteed to be error-free, and we reserve the right to amend it without notice to users.

All rights reserved.

No part of this documentation may be excerpted, reproduced, translated, annotated or duplicated, in any form or by any means without the prior written permission of KYLAND Corporation. Infringement must be investigated.

Copyright © 2023 Kyland Technology Co., Ltd.

Safe Notice

This product has good and reliable performance within the use scope of the design, but However, artificial damage to the device should be avoided. Before using the device, please read the manual carefully to ensure the safety of the users and the device. Please keep this manual properly for future reference. We shall not assume any responsibility for any personal injury or device damage caused by the violation of the safe notices.

- Do not place and install the device close to the water source or humidity, and keep the relative humidity around the device within the range of 5%~95% without condensation.
- Do not place and install the device in high magnetic, strong shock or high temperature places, and keep the working and storage temperature of the device within the specified range.
- Keep the device placed safely to prevent falling; keep the device installed tight to prevent slip.
- Keep the device and the surrounding environment clean, and wipe it with a dry soft cotton cloth when necessary.
- Do not place sundries on the device or cable to keep the heat dissipation of the device unobstructed and the cable smooth and unknotted.
- Avoid exposed metal wire when wiring, prevent high temperature oxidation of metal wire or electric connection.
- Verify the power supply specifications supported by the device before power on, prevent to damage the device by high voltage.
- Keep the power plug and other device connectors firmly connected to prevent poor contact.
- Do not plug power with wet hands, do not touch device and device accessories with wet hands before power off.
- When the device parts are lost, please purchase the replacement parts under the guidance of our marketing or technical support engineer. It is strictly prohibited to choose them privately.

- The device shall be scrapped in accordance with the relevant national regulations to reduce the environmental pollution.

In the following cases, please immediately disconnect the power supply and contact us.

- The water enters into device
- Device breakdown or casing break.
- Device working abnormality or performance change.
- Device produces the odor, smoke, or abnormal noise.

Contents

1 Product Overview	1
1.1 Front panel	1
1.2 Back panel	1
1.3 Matched media converter models	2
2 Installation	3
2.1 Dimensions	3
2.2 Installation methods and steps.....	3
2.2.1 Chassis installation and disassemble	4
2.2.2 Media converter installation and disassemble	5
2.2.3 Grounding.....	5
2.2.4 Power supply connection.....	6
3 LED status	8
4 Basic performance and specifications	9

1 Product Overview

KOM-RH rack chassis supports 14 slots, up to 14 KOM600H 100M or 1000M media converters, flexible configuration, and supports redundant power input of 100-240VAC, 50/60Hz, 110-220VDC.

1.1 Front panel

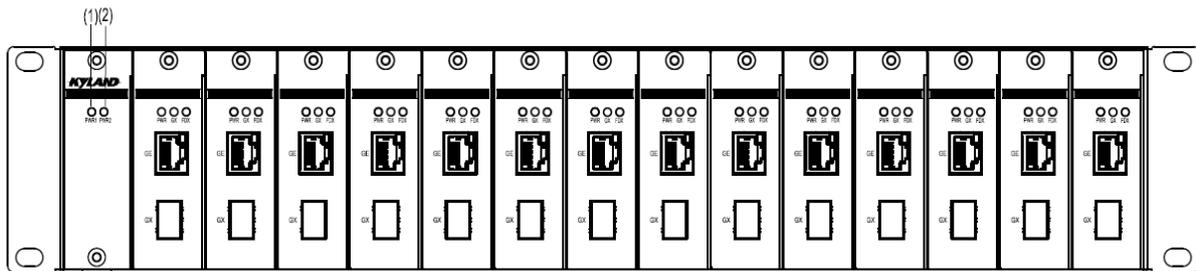


Figure 1 KOM-RH front panel view

Table 1 KOM-RH front panel mark description

No.	Mark	Description
(1)	PWR1	Power 1 LED
(2)	PWR2	Power 2 LED

1.2 Back panel

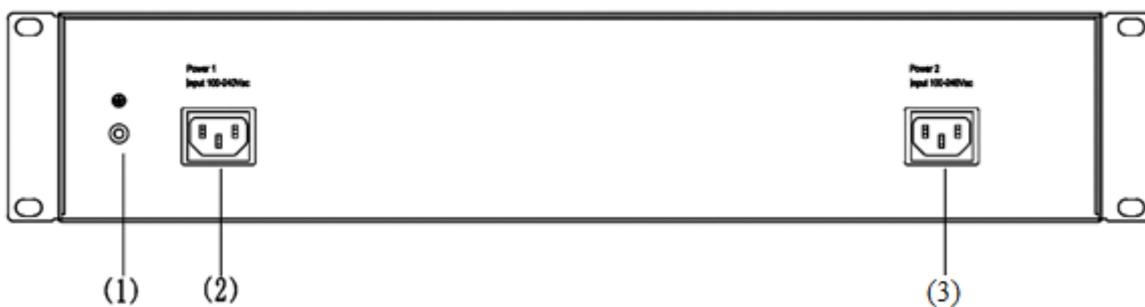


Figure 2 KOM-RH back panel view

Table 2 KOM-RH back panel mark description

No.	Mark	Description
(1)	⊙	Grounding screw

(2)	Power1	Power socket 1
(3)	Power2	Power socket 2

1.3 Matched media converter models

100M media converter

KOM600H-100/SM-12VDC	Support 1 100M ethernet port and 1 100M singlemode SFP port 12VDC single power input.
KOM600H-100/MM-12VDC	support 1 100M ethernet port and 1 100M multimode SFP port, 12VDC single power input.

1000M media converter

KOM600H-1000/SM-12VDC	Support 1 1000M ethernet port and 1 1000M singlemode SFP port 12VDC single power input.
KOM600H-1000/MM-12VDC	support 1 1000M ethernet port and 1 1000M multimode SFP port, 12VDC single power input.

2 Installation

2.1 Dimensions

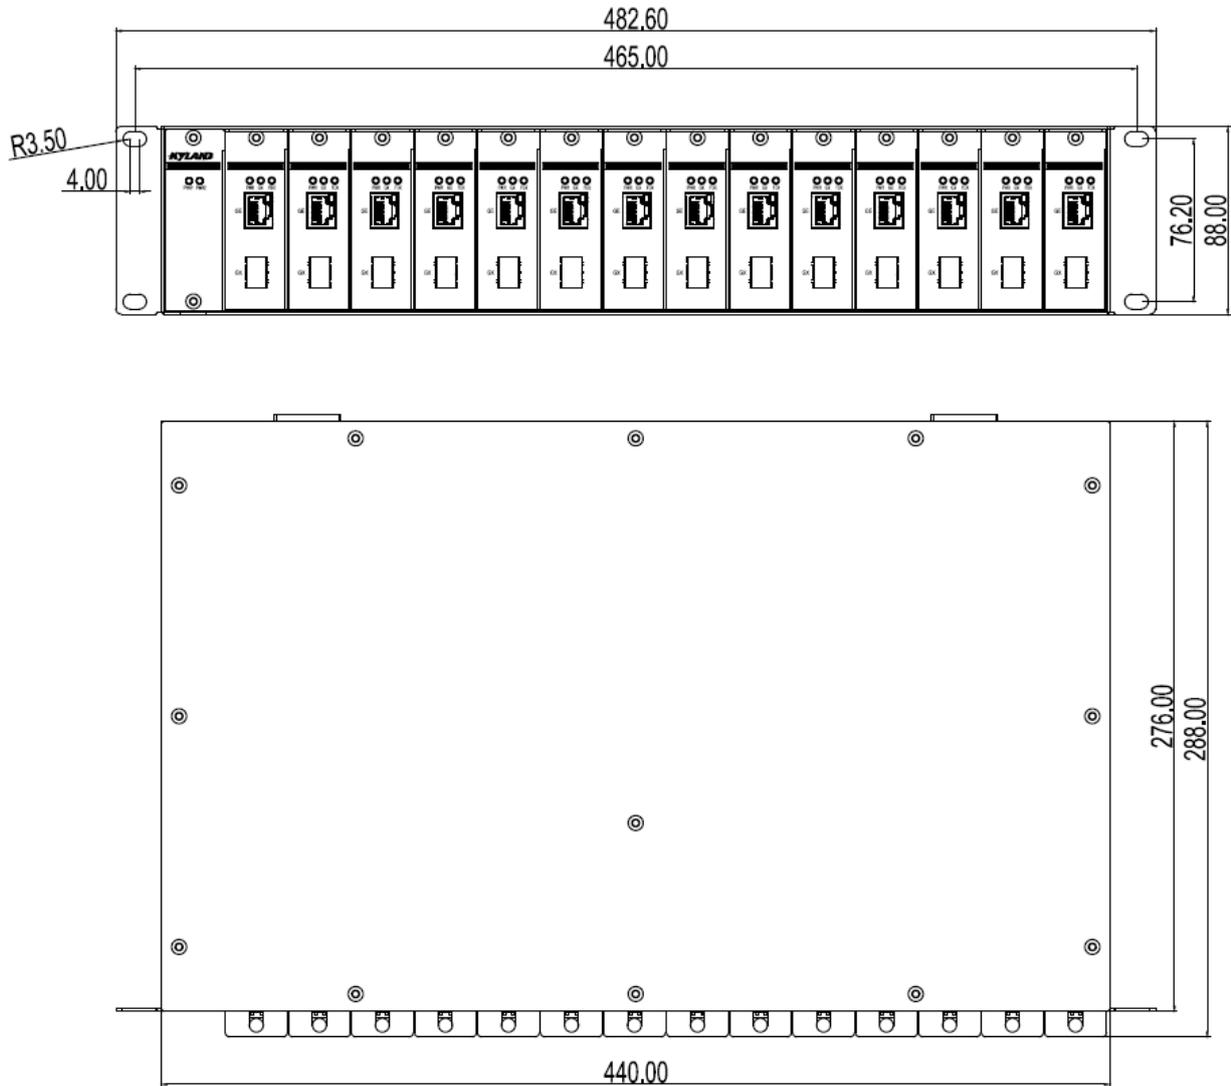


Figure 3 Dimensions (mm)



Caution:

The device enclosure is a part of the cooling system of the whole device. The enclosure will heat up at the normal working. Do not cover the enclosure when the device is working.

2.2 Installation methods and steps

Before installing, please confirm the following installation requirements:

- 1) Environmental requirements: temperature $-20^{\circ}\text{C} \sim 70^{\circ}\text{C}$, relative humidity 5%~95% (no condensation).
- 2) Power supply requirement: confirm that the working voltage matches the voltage range identified on the device.
- 3) There is a fuse in the internal power input of the device and it will be fused if overcurrent.
- 4) Ground resistance requirement: $<5\Omega$.
- 5) Avoid direct sunlight, stay away from the heat source or strong electromagnetic interference area.
- 6) The installation environment shall meet the requirements of the authority, and shall not touch the device directly to avoid personal injury.
- 7) Only professionals, or trained and qualified personnel can install, replace, and repair this device.

2.2.1 Chassis installation and disassemble

- Installation

Step 1: Select the installation location of the device to ensure enough installation space and smooth heat dissipation. (Chassis size: 440mm×88mm×405mm).

Step 2: Place the device in the rack to align the long holes of the mounting flange with the corresponding holes in the mounting column, and then complete the installation with screws and the supporting floating nut.

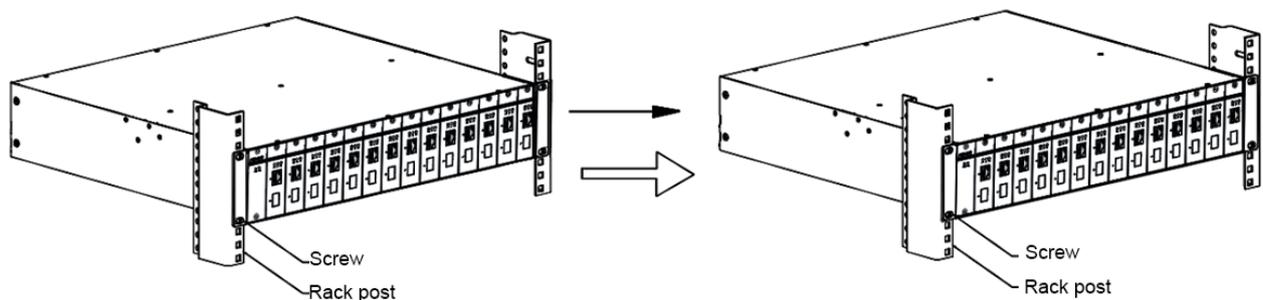


Figure 4 Rack chassis installation

- Disassemble

Step 1: unscrew the screw at the mounting flange and the supporting floating nut.

Step 2: remove the device from the rack and remove the installation flange to complete the disassembly.



Caution:

- Before installing, removing and moving the device, please cut off the power and unplug all cables.
- In a high-vibration environment, the front and back panels of the device should be fixed to the rack, to ensure the safe.

2.2.2 Media converter installation and disassemble

● Installation

Select the installation location of the device to ensure enough installation space and smooth heat dissipation.

Step 1:insert the KOM600H media converter into the selected chassis and push the device in the direction of arrow 1 till the 12VDC power terminal of the device back panel is inserted.

Step 2:align the round hole in the front panel of the media converter with the corresponding hole in the rack, and then tighten the screws to complete the installation.

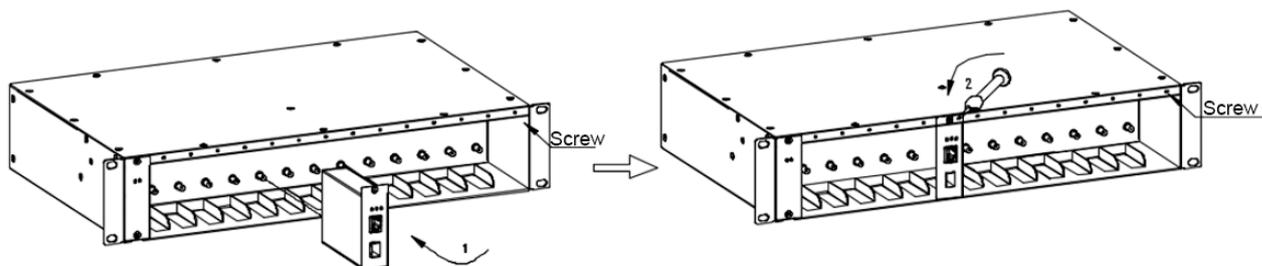


Figure 5 Installation diagram

● Disassemble

Step 1:unscrew the screw at the round hole of the chassis.

Step 2: remove the device from the chassis and complete the disassembly.

2.2.3 Grounding

Normal grounding of device is an important guarantee for lightning protection and interference prevention of device, so users must connect the grounding wire correctly. And

ground before power on, and then disconnect the grounding wire after power off.

The side panel has a grounding screw see Figure 2, that is the grounding wire of the enclosure, called "enclosure ground". After one end of the grounding wire is pressed to the cold pressure terminal and fixed at the "enclosure ground" with ground screws, and the other end of the grounding wire is reliably connected to the earth.



Note:

Cross-sectional area of grounding wire is >2.5mm²; grounding resistance requirement: <5Ω.

2.2.4 Power supply connection

The power terminal is located on the side panel of the device, and the power cord is connected through the power terminal to power the device. This device supports single power supply and redundant power supply, using 5-pin 5.08mm spacing plug type terminal. When configuring redundant power supply, when any of the power supplies fails, the device can operate normally continuously, which improves the reliability of network.



Note:

Field wiring must be copper conductor and the temperature shall to meet 85°C.

- Power interface

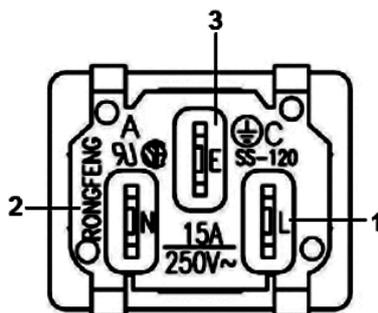


Figure 6 Power interface (socket)

Table 3 Power socket PIN definition

PIN No	Signal	Definition
1	L	Live wire

2	N	Neutral wire
3	E	Earth wire

Electrical parameters:

Material: NYLON

Max current: 10A

Max voltage: 250V



Caution:

Before connecting to the power supply, check that the power supply meets the requirements identified by the device to avoid damage to the device.



Warning:

- Do not contact any exposed wires, terminals and dangerous voltage marks marked in the product to avoid harm .
- Do not remove parts or plug joints during power.

3 LED status

Table 4 Front panel LED description

LED	Status	Description
PWR1 LED	ON	The input power 1 is connected correctly and running normally
	OFF	The input power 1 is not connected or is running incorrectly
PWR 2 LED	ON	The input power 2 is connected correctly and running normally
	OFF	The input power 2 is not connected or is running incorrectly

4 Basic performance and specifications

Slot	
Slot number	14
LED	
Power LED	PWR1, PWR2
Power supply	
Input voltage range	100-240VAC,50/60Hz,110-220VDC redundant power input
Terminal	5-pin 5.08mm spacing plug-in terminal
Power rating	28.5W
Mechanical	
Chassis	Metal, no fan
Mounting	19-inch 2u rack mount
Dimension (W×H×D)	440mm×88mm×276mm (Excludes the connector overhang)
Weight	8KG
Environment	
Working temperature	-10℃~+60℃
Storage temperature	-20℃~+70℃
Relative humidity	5%~95% No condensation
Standard (KOM-RH chassis+KOM600H meida converter)	
EMI	EN55032/CISPR22,Class A
EMS	IEC61000-4-2(ESD): ±6kV (contact), ±8kV (air) IEC61000-4-3(RS): 10V/m (80MHz~2GHz) IEC61000-4-4(EFT): Power Port: ±2kV; Data Port: ±1kV IEC61000-4-5(Surge): Power Port: ±1kV/DM, ±2kV/CM; Data Port:

	$\pm 1\text{kV}$ IEC61000-4-6(CS): 10V (150kHz–80MHz)
Safety	IEC62368-1, EN62368-1
Warranty	
Warranty	5 years

KYLAND

Service Hotline: (+8610)88796676

Fax: (+8610)88796678

Web: <http://www.kyland.com.cn>

Email: support@kyland.com

For more KYLAND product, please visit:

<http://www.kyland.com.cn/>

<http://www.kyland.com/>